

[FAQ]

The Different Types of LPR USB Dongles

Applied to

LPR Plugin with ASManager

Question



Please help to identify how to use these four dongles?

Answer

ID	Dongle	Support		Description
		GV-LPR V3000~v3130	GV-ASManager v4000~v4350	
1.	LPR 8 Port	✓	✓	It is used for recognizing software installed: 1. GV-LPR V3130 (8Ch LPR) + GV-MultiCam 2. GV-ASManager + GV-MultiCam (8Ch LPR)
2.	LPR Only 8 Port	✓	✓	It is used for recognizing software installed: GV-LPR V3130 + 8Ch LPR
3.	LPR Software (1)	✓	✗	It is used for GV-LPR V3130 version and go together with GV-DSLPR.
4.	LPRCA001	✓	✗ (4200-4350)	It can use for both GV-LPR and GV-ASManager. By this dongle it will snap the plates with no recognition function.

※ Starts from [GV-ASManager V4200](#), this dongle will no longer needed because [GV-ASManager V4200](#) has [built-in](#) function.