

[FAQ]

GV-LPR USB dongle key license info

Release Date: 02/18/2016

Applied to

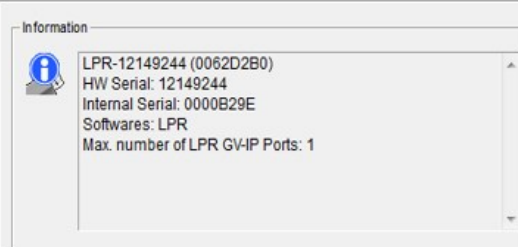

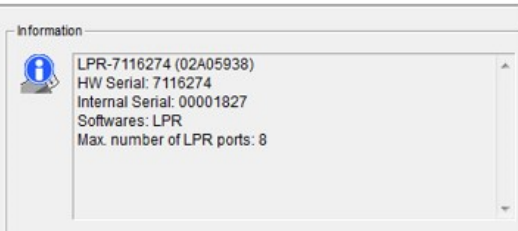
GV-LPR USB dongle

Question

What are the types of USB dongle info shown in GVUSBKeyup client utility?

Answer

For more information, refer to the chart below.

LPR Dongle Type	Dongle Information for Gvusbclient.exe	
<p>LPR Capture Dongle</p>	<p>LPR (0062D2B0)</p>	 <p>Information</p> <p>LPR-12149244 (0062D2B0) HW Serial: 12149244 Internal Serial: 0000B29E Softwares: LPR Max. number of LPR GV-IP Ports: 1</p>
<p>LPR Software Dongle (for DSPLPR use)</p>	<p>LPR (03EC5938)</p>	 <p>Information</p> <p>LPR-7159002 (03EC5938) HW Serial: 7159002 Internal Serial: 0000B39 Softwares: LPR LPR Software enabled: Yes</p>
<p>LPR Dongle (for DVR/NVR)</p>	<p>LPR (02A05938)</p>	 <p>Information</p> <p>LPR-7116274 (02A05938) HW Serial: 7116274 Internal Serial: 00001827 Softwares: LPR Max. number of LPR ports: 8</p>

For any question on the information provided, please feel free to submit your question to our support window at support@geovision.com.tw