

# GV- Tower System V2




Modified :  
2016.09.02


By GeoVision FAE SI Team

---



1. Removing side covers

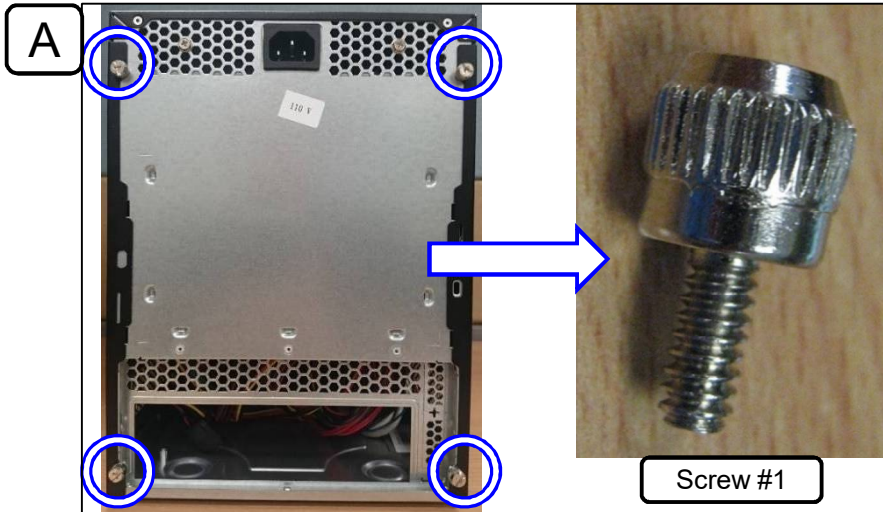

Step:  
1. Remove the 4 highlighted side cover screws (Screw #1)  
2. Push and slide the side covers toward the back of the case to remove covers

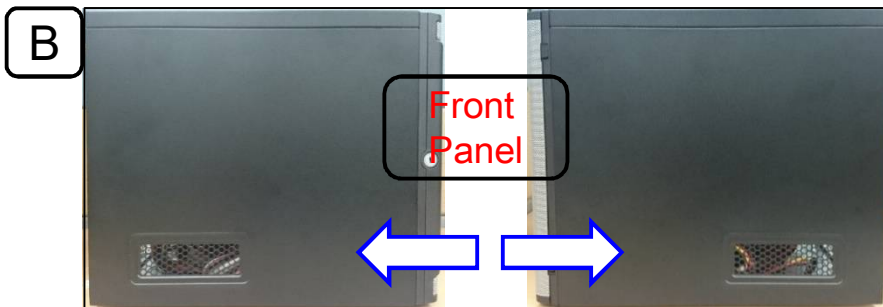

2. Remove PSU

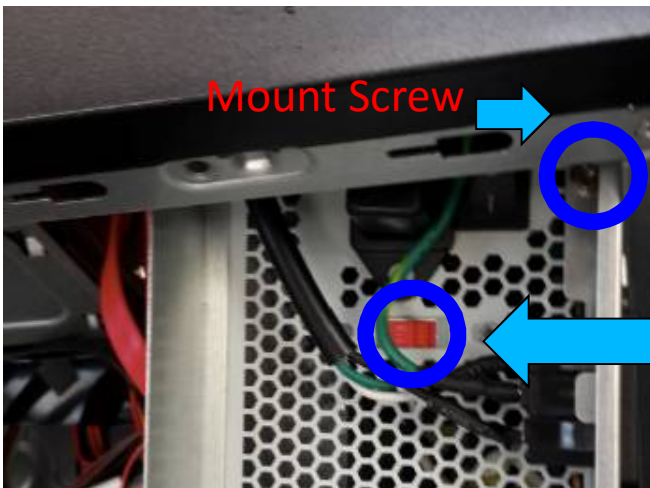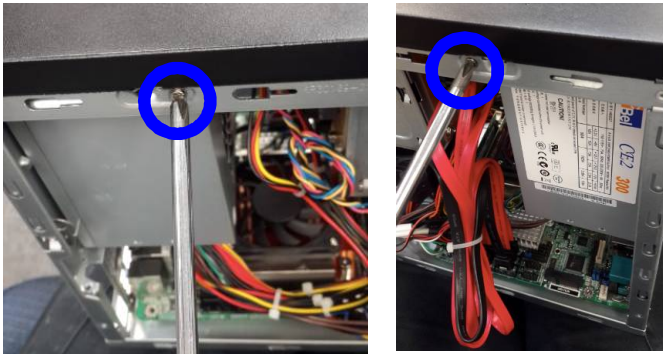

1.Remove highlighted 4 screws (1 from each side & 2 from the back, ) the PSU will be slightly loosen

2.Push the PSU towards the front panel and pull out the PSU from the side.

3.Remove the 4 mount screws on all sides to remove the PSU from the bracket mount.

**Note: Make sure to adjust the proper voltage level before connecting the power cord to the PSU to avoid damaging the unit.**

**Voltage Dipswitch**