




How to resend the Access log of a controller to ASManager:

1. Remove the Micro SD card from a controller -> Insert Micro SD card into a card reader -> Insert the card reader into a pc for data process




2. You will see 2 folders as shown below once you open the card reader device on Windows.
3. Select "SENTLOG" folder -> Copy the all Access log that you want them to be resent to ASManager

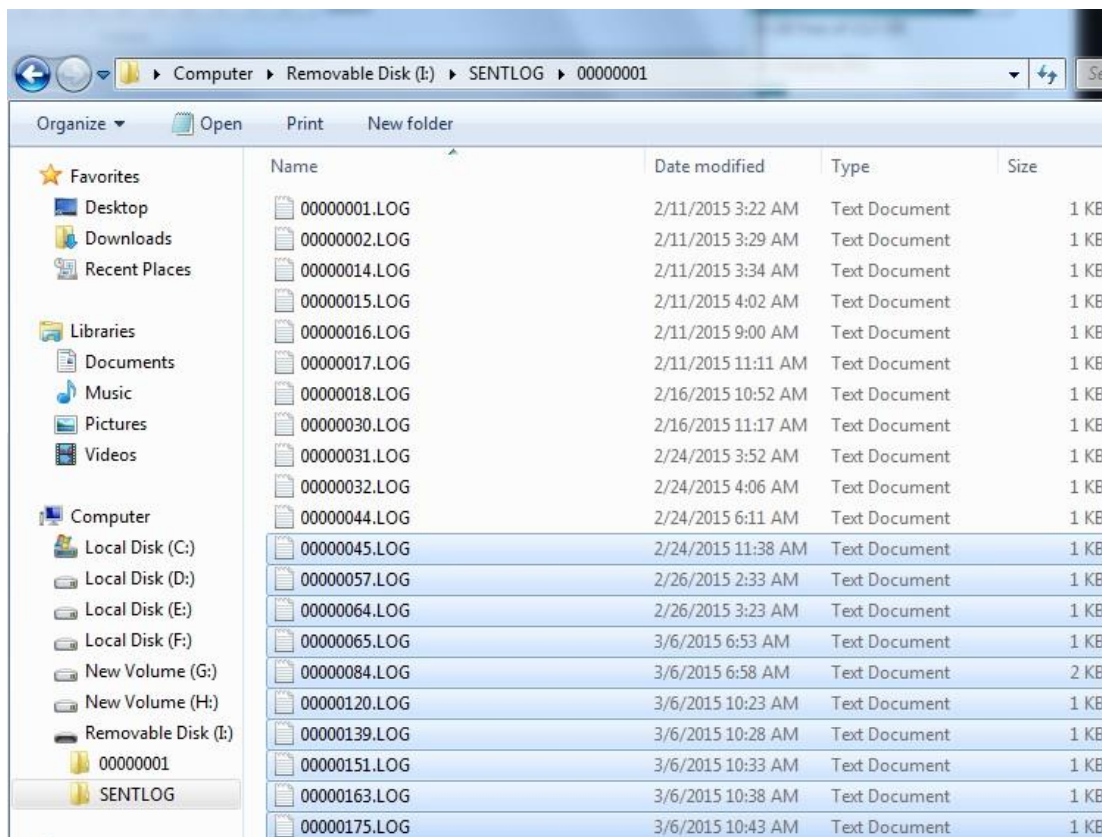



4. Paste the Access log you just copy from "SENTLOG" folder into the folder "00000001"

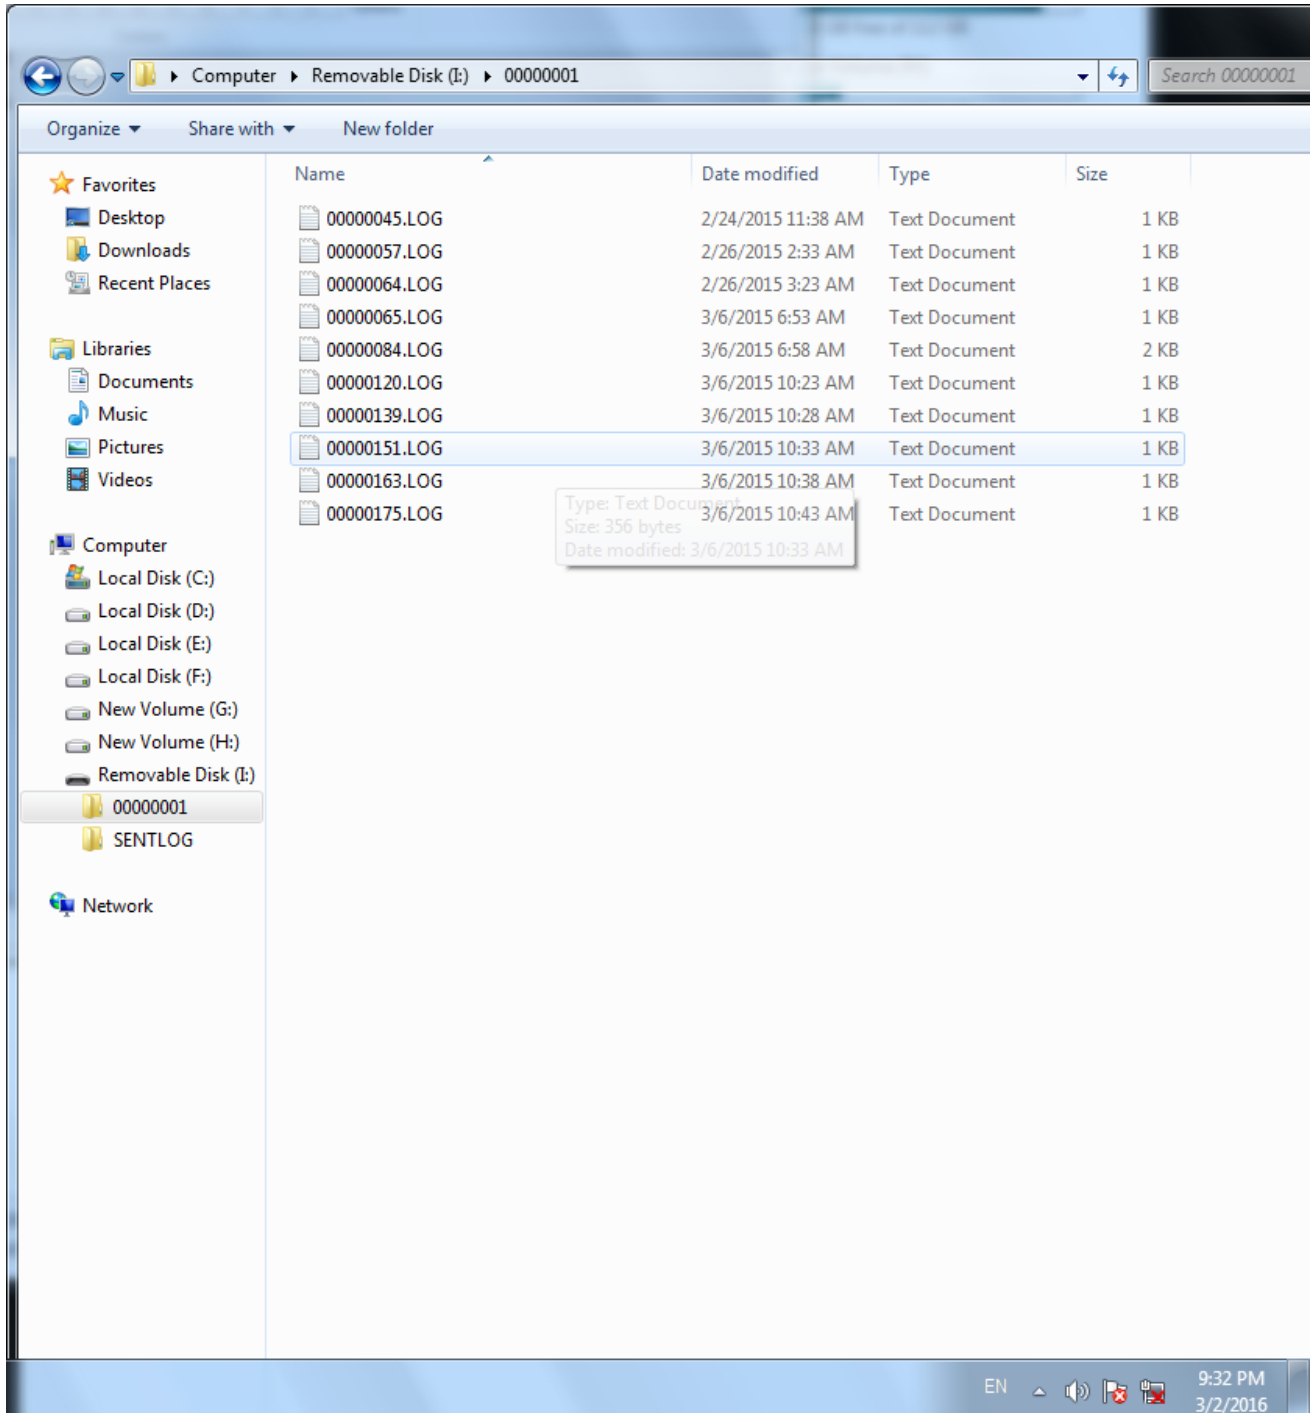

5. Once you are done, go remove the card reader from the PC



- 6. Insert the micro SD card back to the controller it belongs to -> Reset the controller**
- 7. The missing access log will be automatically sent to ASManager**