



1. 請先停止 Recording Server 錄影→ 將原有 LUN 先行刪除

Stop all Recording Server recording -> Go to StorageV2 and delete the original LUN

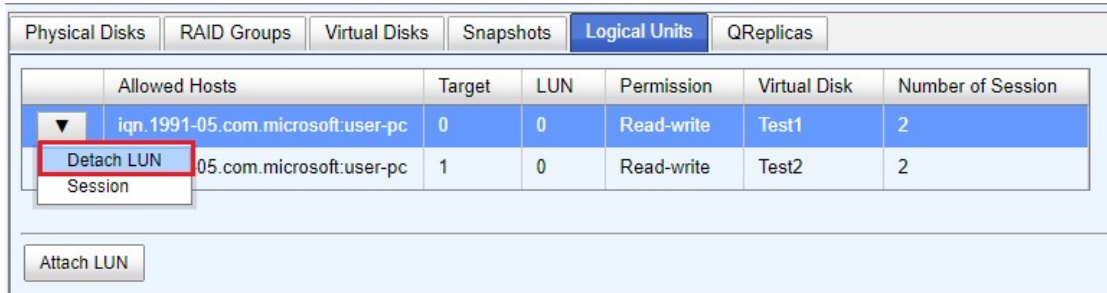


2. 開啟 iSCSI 啟動器確認啟動器名稱

Open iSCSI Initiator and check the name

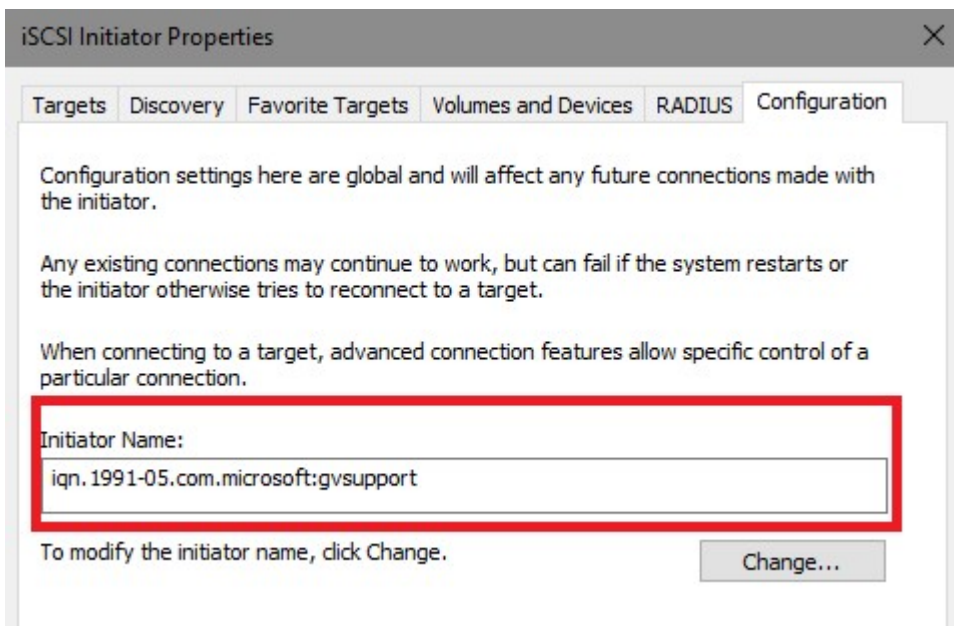

3. 登入 GV-Storage V2→左側清單中選 Volume Configuration→選擇 Logical Units

Log into GV-Storage V2 -> Volume Configuration on the left side -> select Logical Units

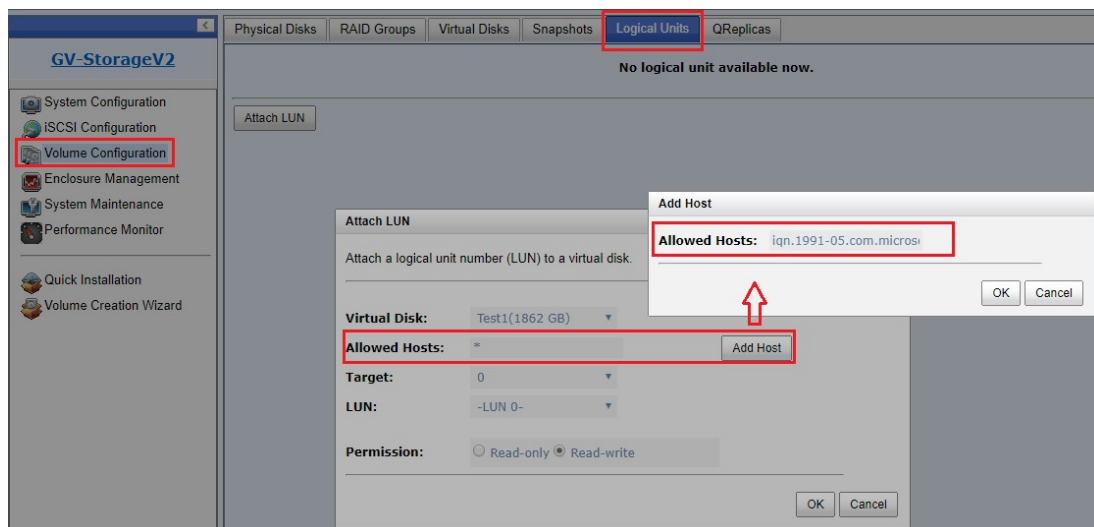

4. 點選 Attach LUN 來新增一個 LUN→選擇 Virtual Disk→Allowed Hosts 輸入 PC 啟動器名稱→Target 選擇 0 →LUN 選擇 0→點選 OK 以完成新增。

Select "Attach LUN to create a new LUN -> Select a Virtual Disk -> Allowed Hosts (iSCSI Initiator Name for Recording Server 1) -> Target 0 -> LUN 0 -> OK

Attach LUN

Attach a logical unit number (LUN) to a virtual disk.

Virtual Disk: Test1(1862 GB) ▼

Allowed Hosts: iqn.1991-05.com.micros Add Host

Target: 0 ▼

LUN: -LUN 0- ▼

Permission: Read-only Read-write

OK Cancel

5. 重 Step 2→Target 選擇 1→LUN 選擇 0→點選 OK 以完成新增
Repeat last step

Suggestion:

Virtual Disk: Storage -> Allowed Host: Recording Server 1 -> Target 0 -> LUN 0

Virtual Disk: Expansion 1 -> Allowed Host: Recording Server 1 -> Target 0 -> LUN 1

Virtual Disk: Expansion 2 -> Allowed Host: Recording Server 2 -> Target 1 -> LUN 0

6. 檢查 Target 是否重複

Check to make sure Target is not repeated for different hosts

Allowed Hosts		Target	LUN	Permission	Virtual Disk	Number of Session
▼	iqn.1991-05.com.microsoft:user-pc	0	0	Read-write	Test1	2
▼	iqn.1991-05.com.microsoft:user-pc	1	0	Read-write	Test2	2

Attach LUN

7. 開啟 iSCSI 啟動器 → Target 中輸入連線 IP → 快速連線

Open iSCSI initiator -> Target: StorageV2 IP -> Quick Connect

iSCSI Initiator Properties

Targets | Discovery | Favorite Targets | Volumes and Devices | RADIUS | Configuration

Quick Connect
To discover and log on to a target using a basic connection, type the IP address or DNS name of the target and then click Quick Connect.

Target: Quick Connect...

Discovered targets

Refresh

Name	Status
------	--------

To connect using advanced options, select a target and then click Connect.

To completely disconnect a target, select the target and then click Disconnect.

For target properties, including configuration of sessions, select the target and click Properties...


Connect

Disconnect

Properties...

8. 選取要連線的 Target→連線完成後按下確認

Select the target and connect.

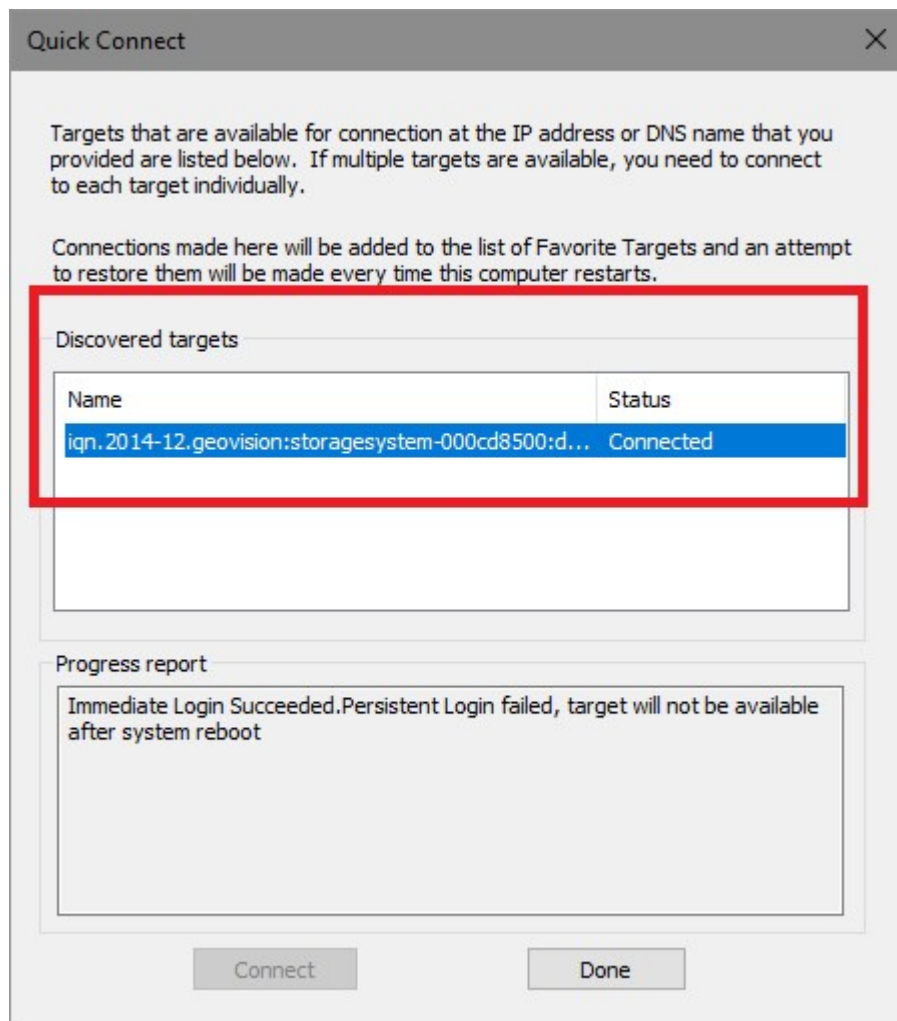

9. 至 Disk Manager 中確認新增的磁區是否有出現→初始化磁區後建立新磁區

Go to Disk Manager and check if the new volume is there, and create partition.

